

Installation Exposition of PLM-02 Pin Lock

	<p>1. The gearshift should be in the parking position. And the pin of the lock should be behind the shift as the photo shows.</p>
	<p>2. Pull out the plastic lead cover of gearshift.</p>
	<p>3. Lose the screws on right & left front side of the gearbox.</p>
	<p>4. Lose the screws on right & left backside of gearbox.</p>



5. Lose the inside screws of gearbox.



6. Take the plastic gearbox out.



7. The Lock should be screwed tight on the bracket by 2 pcs of screw 1 .



8. Band the bracket to suit the shape of gearbox with the banding machine, in order to screw the bracket tight on the metal board of the gearbox.



9. Position the lock with the pin behind the gearshift. And remove the carpet of the front seat and check the position of the bracket.




10. Mark the center hole with marker only.



11. Drill a center hole of the bracket first. Please do not drill other two holes until adjust the lock in right position.



12. Uses the Screw 2 for the center hole of the bracket and screw it tight up with the wash 3 & wash 4. Then spray the Anti-Corrosive paint on the nuts to avoid gather rust.

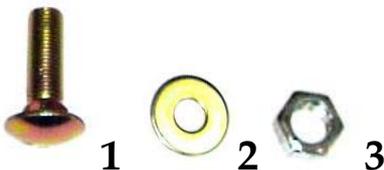



13. Adjust the lock in right position, and then drill another holes. Use the Screw 4 for the holes and tight them up with wash 5 & wash 6.
Then spray the Anti-Corrosive paint on the nuts to avoid gather rust.



14. Measure the height, deep & wide distance based on the gearshift.



15. Cut off the square lock hole on the Plastic gearbox and put the gearbox back.

Put the removable lock frame



into it's position, then screw

up all the screws of gear box back.



16. Final Screw the pin holder on the gearbox with screw 7.



17. Finish.